

# Product Manual

## Operation Guide

### 1. Entering the Menu

- On the main interface, double-click the knob to enter the menu page.

### 2. Menu Operations

- On the menu page, rotate the knob to switch between menus and modes.
- Click the knob again to “confirm”.

### 3. Frequency Band Switching

- On the main interface, rotate the knob to switch frequency bands.
- Click the knob again to “confirm”.

### 4. Volume Output Note

- Due to the compact size of the device, an earphone amplifier cannot be installed. Therefore, the volume output will be lower when headphones are inserted, which is a normal phenomenon.
- To achieve a louder volume, it is recommended to connect to an external speaker.

# Product Manual

## Operation Guide

### 1. Entering the Menu

- On the main interface, double-click the knob to enter the menu page.

### 2. Menu Operations

- On the menu page, rotate the knob to switch between menus and modes.
- Click the knob again to “confirm”.

### 3. Frequency Band Switching

- On the main interface, rotate the knob to switch frequency bands.
- Click the knob again to “confirm”.

### 4. Volume Output Note

- Due to the compact size of the device, an earphone amplifier cannot be installed. Therefore, the volume output will be lower when headphones are inserted, which is a normal phenomenon.
- To achieve a louder volume, it is recommended to connect to an external speaker.