 


RADDY


DAB+/FM Digital Radio with Color Display
USB/Micro SD MP3 & Bluetooth Player

RD939

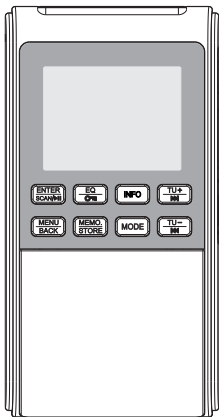


User Manual

 SCHEMATIC DIAGRAM

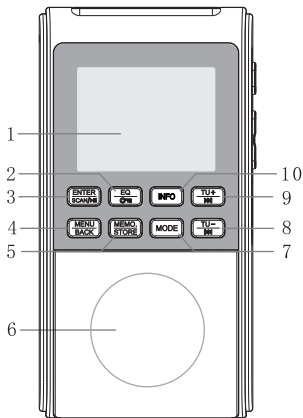


Front View

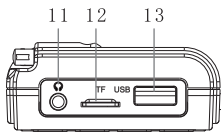 


Top View

 1. Screen
2. EQ/Lock Button
3. Enter/Auto Scan/Play/Pause Button
4. Menu/Back Button
5. Memory/Store/Playback Sequence Button
6. Speaker
7. Mode Button
8. Tune Down/Previous Button
9. Tune Up/Next Button
10. Info Button
11. 3.5mm Earphone Jack
12. Micro SD Slot
13. USB Port

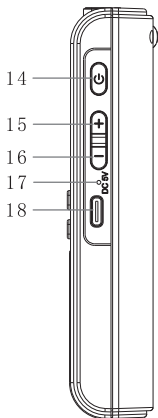

Right View

 - 14. Power Button
- 15. Volume + Button
- 16. Volume - Button
- 17. Charging Indicator

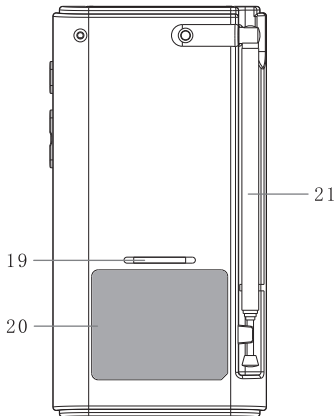






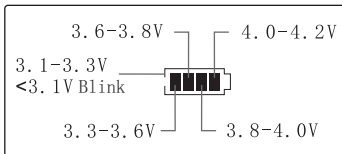 
Rear View

- 18. USB-C Port
- 19. Back Slot
- 20. Back Label
- 21. Telescopic Antenna

Battery Charging




- Plug into the **USB-C Port** on the right side of the device using the included charging cable and connect to a power source.
- When charging, the **Charging Indicator** lights up, and the screen lights up with the battery icon blink in increments.
- When fully charged, the **Charging Indicator** goes off.
- Battery icon description:

4 cells of battery power:		100%
3 cells of battery power:		75%
2 cells of battery power:		50%
1 cell of battery power:		25%
0 cells of battery power:		3%



 
 
OPERATION

Power On/Off

 
- Long press the **Power**  **Button** to switch the device on, and enter the clock mode. Long press again to switch the device off.
- In clock mode, press the **Power**  **Button** to enter the play mode. The first time you enter the play mode, it will scan the DAB stations automatically.
- Press the **Power**  **Button**, which will return the clock mode.



Long Press

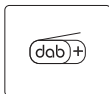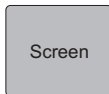



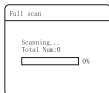

Press



Press





 
Tune DAB Station

- In clock mode, press the **Power**  **Button** to enter the play (DAB) mode.
- The device will display and play the current station.
- Press the **Tune Down**  **Button** or **Tune Up**  **Button** to browse the station list.
- Press the **Enter**  **Button** to choose another station.



Volume Adjustment

- In play mode, Press the **Volume +**  **Button** or **Volume -**  **Button** to adjust the volume.

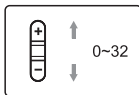


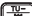 



Select Play Mode

- In play mode, press the **Mode**  **Button** and **Previous**  **Button** or **Next**  **Button** to select the mode between DAB/FM/Bluetooth/USB/Micro SD, then press the **Enter**  **Button** to confirm.







Tune FM Station and Auto Scan

- In play (FM) mode, long press the **Auto**  **Scan Button** to start the scan. Scanned stations are automatically saved in the memory.
- To manually tune, press the **Tune Down**  **Button** or **Tune Up**  **Button** to change the frequency. Long press the **Tune Down**  **Button** or **Tune Up**  **Button** to fast tuning, and it will stop at the next available station.






Recall Preset Station in Memories

- In play (FM) mode, press the **Memory**  Button to browse the radio frequencies in memory space.
- Press the **Previous**  Button or **Next**  Button to select the memory number you want to recall.
- Then press the **Enter**  Button.






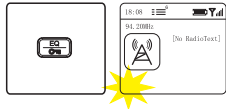 
Store Preset Stations

- Tune in to the station you want.
- Long press the Store Button until “Preset Store” appears on the screen.
- Press the **Previous**  Button or **Next**  Button to pick a memory number (0-50).
- Then press the **Enter**  Button.



Lock Function




- Long press the **Lock**  **Button** until the lock  icon appears on the screen.
- Long press the **Lock**  **Button** to unlock.







Station Info

In play (DAB/FM) mode, press the Info Button repeatedly to cycle through the station info.

Bluetooth

 
- In play (Bluetooth) mode, activate the Bluetooth function on your Bluetooth device and select “RD939”.
- When the connection is successful, the unit shows the name of your device.
- Press the **Play/Pause**  **Button** to start or pause the playback.
- Press the **Previous**  **Button** or **Next**  **Button** to skip to the previous or next track.

USB/Micro SD

- In play (USB/Micro SD) mode, insert a USB flash drive or Micro SD card.
- Press the **Play/Pause**  **Button** to start or pause the playback.
- Press the **Previous**  **Button** or **Next**  **Button** to skip to the previous or next track.
- Press the **Playback Sequence**  **Button** to change the playback sequence.

Use of Earphones

- Please use standard 3.5mm headphones to connect this device.

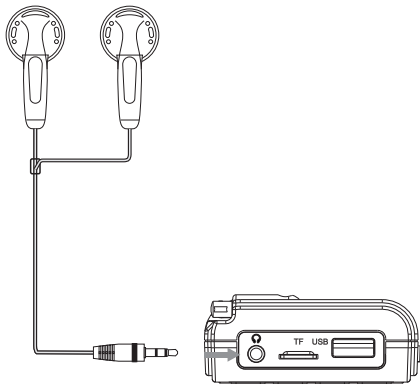

SYSTEM SETTINGS

Time	>
Alarm	>
Language	>
Backlight	>
Sleep	>
Equaliser	>
Clock style	>
Factory Reset	>
SW version	>

Time











Set Time/Date

Auto update <From Any/DAB/FM/NO update>




Set 12/24 hour <12/24 hour>

 
Set date Format <MM-DD-YYYY/DD-MM-YYYY>

Manual Clock Setting



- Press the **Menu**  **Button** to enter the system settings.
- Find and enter the “Time” option. Then enter the “Set Time/Date”.
- Press the **Previous**  **Button** or **Next**  **Button** to adjust the hours, and press the **Enter**  **Button** to save.
- Press the **Previous**  **Button** or **Next**  **Button** to adjust the minutes, and press the **Enter**  **Button** to save.
- Press the **Previous**  **Button** or **Next**  **Button** to adjust the date, and press the **Enter**  **Button** to save.

Alarm

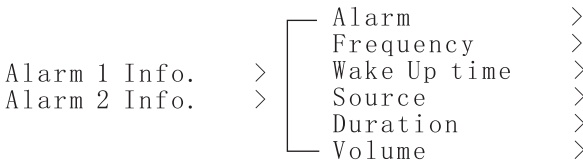



- You can set two different alarms. Choose with the **Previous**  **Button** or **Next**  **Button** the options/settings and confirm with the **Enter**  **Button**.

 
 
 


Alarm Off/Snooze

- When the alarm sounds, press the **Power**  **Button** to turn off the alarm.
- Or while the alarm sounds, press the **Enter**  **Button**. The snooze function is on, and the snooze time is 10 min.

Sleep Timer Setting

- In play mode, press the **Menu**  **Button** and choose “System”.
- Use the **Previous**  **Button** or **Next**  **Button** and the **Enter**  **Button** to select “Sleep”.
- Using the three buttons just described, select the sleep time (120, 90, 60, 45, 30, 15). The device will switch off when the set time is up.

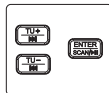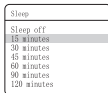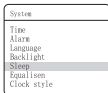

Language

- | | |
|-----------------|-----------------|
| 1. English | 15. Română |
| 2. Deutsch | 16. Magyar |
| 3. Italiano | 17. Latviski |
| 4. Français | 18. Polski |
| 5. Norsk | 19. Türkçe |
| 6. Dansk | 20. Slovenščina |
| 7. Nederlands | 21. Eesti |
| 8. Svenska | 22. Srpski |
| 9. Čeština | 23. Hrvatski |
| 10. Slovenčina | 24. Ελληνικά |
| 11. Española | 25. Български |
| 12. Português | 26. Русский |
| 13. Suomi | 27. Україна |
| 14. Lietuviškai | 28. Azərbaycan |

Backlight

Timeout: 0n-10sec- 20sec-30sec-45sec-60sec-90sec-120sec-180sec

On level: Low-Medium-High

 
 
Dim level : Low-Medium-High-OFF

Equalizer

- Normal
- Rock
- Pop
- Jazz
- Classic

Clock Style

- Classic Analog
- Normal Digital

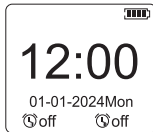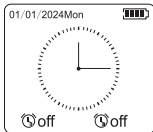

Factory Reset

- Factory Reset? 〈No〉 Yes

SW Version

- The current version of DAB can be viewed.

Play (DAB) Mode Menu

Full Scan

- Automatic scanning and saving of stations on DAB frequencies.

Manual Tune

- Press the **Previous**  **Button** or **Next**  **Button** to choose other frequencies and press the **Enter**  **Button**.





DRC

- DRC (Dynamic Range Control) is divided into three options (off/low/high) for automatically adjusting the volume dynamic range of audio to provide a better listening experience in noisy or specific environments.





Prune

- Clearing invalid stations from the DAB station list is equivalent to deleting all stations that cannot be received after DAB - Full Scan.

Preset – Preset Recall

- In play (DAB) mode, select “Preset Recall” in the menu or press the **Memory**  **Button**. Then use the **Previous**  **Button** or **Next**  **Button** and **Enter**  **Button** to recall a DAB station from memory.

Preset – Preset Store

- In play (DAB) mode, select “Preset Recall” in the menu or long-press the **Store**  **Button**. Then use the **Previous**  **Button** or **Next**  **Button** and **Enter**  **Button** to save.

Play (FM) Mode Menu

Full Scan

- Automatic scanning and saving of stations on FM frequencies.





Scan Setting

- Scan setting is divided into two options (All stations/Strong stations only) for automatically adjusting the reception sensitivity.





Audio Setting

- Stereo or mono playback can be selected.

Preset – Preset Recall

- In play (FM) mode, select “Preset Recall” in the menu or press the **Memory**  **Button**. Then use the **Previous**  **Button** or **Next**  **Button** and **Enter**  **Button** to recall a FM station from memory.

Preset – Preset Store

- In play (FM) mode, select “Preset Recall” in the menu or long-press the **Store**  **Button**. Then use the **Previous**  **Button** or **Next**  **Button** and **Enter**  **Button** to save.

SAFETY PRECAUTIONS

Read and understand all safety instructions before using the radio.

- Avoid dropping or hitting the device.
- Keep away from direct sunlight, high temps, and humidity.
- Stay clear of magnetic objects to prevent interference or damage.
- If anything gets inside the radio, get it checked by a qualified technician before using it.
- Clean the outside with a soft, damp cloth – don't use strong solvents.
- Don't use earphones while driving or walking for safety.
- Avoid excessive static electricity to prevent damage to internal parts.
- Don't try to open, fix, or change the device.

WHAT'S IN THE BOX

- DAB+/FM Radio x 1
- User manual x 1
- USB-C Cable x 1
- Wrist Strap x 1
- Back Bracket x 1

SPECIFICATIONS

Frequency range	DAB+: 174-240 MHz FM: 87.5-108 MHz
Memory number	DAB+: 30 FM: 50
DC power input	5V/1A
Built-in Battery	1200mAh
Speaker	Φ40mm/4Ω/5W
Dimensions – (LxHxW)	67x127x28mm
Weight	150g



MADE IN CHINA